


APR CONTROL® FOR R-410A IN TANDEM COMPRESSOR CONFIGURATION

Heat Pump(HP) Installation will be different.
See HP installation diagram

Read all installation instructions before installing

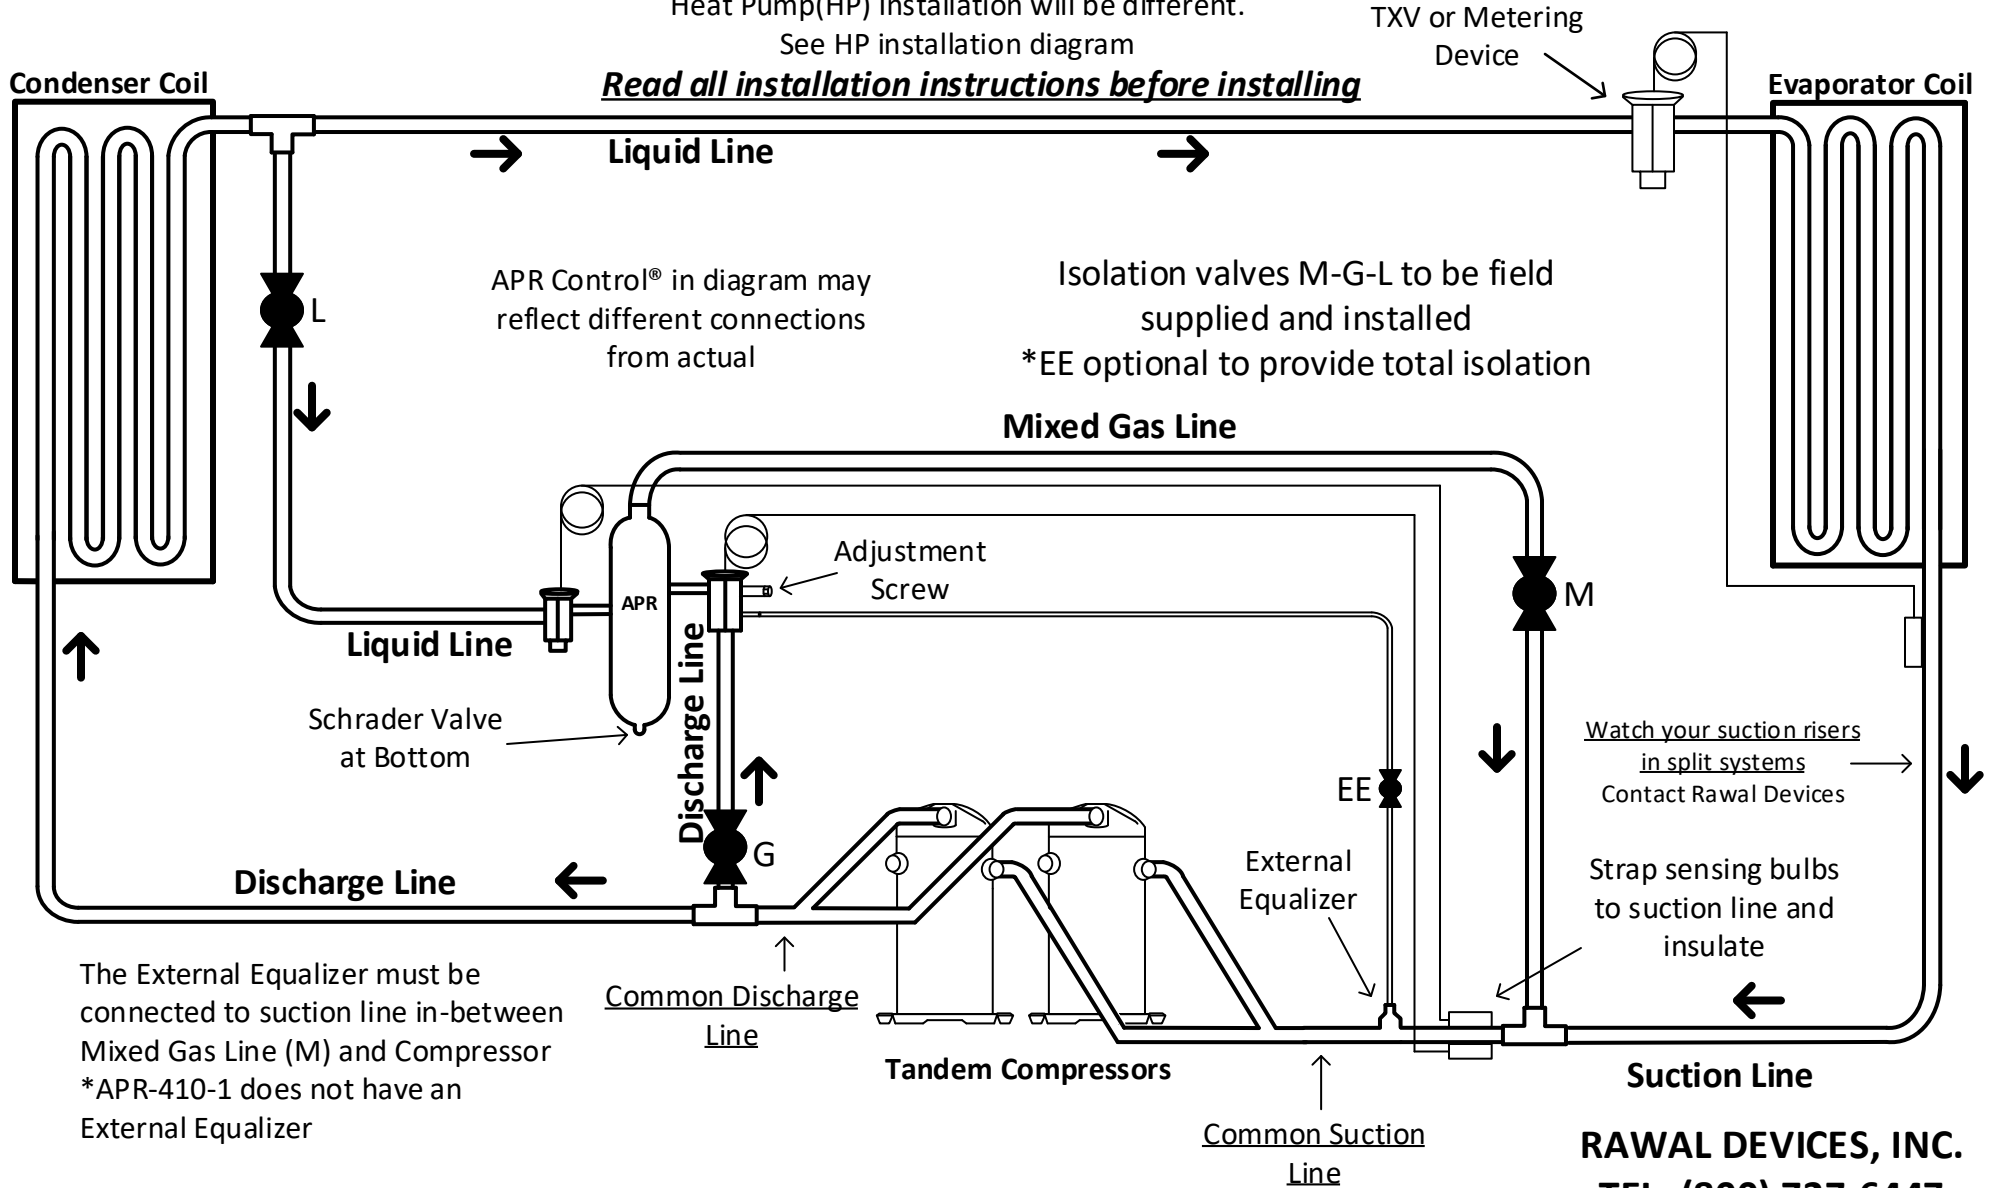

The External Equalizer must be connected to suction line in-between Mixed Gas Line (M) and Compressor
*APR-410-1 does not have an External Equalizer

RAWAL DEVICES, INC.
TEL. (800) 727-6447
www.Rawal.com
techsupport@rawal.com

*Drawing for illustrative purposes only
Please call for assistance

